



Table of Contents

Getting Started 4	
Your Rider 100 4	
Accessories5	
Status Icons 5	
Step 1: Charge your Rider 100 6	
Step 2: Turn On Rider 100 6	
Step 3: Initial Setup6	
Step 4: Acquire Satellite	
Signals 7	
Step 5: Ride Your Bike with	
Rider 100 7	
Reset Rider 100 7	
Share Your Records8	
View Exercise Records9	_
History Flow10	U
Settings 1	1
Settings 1 Smart Lap 1	
	1
Smart Lap 1	1
Smart Lap 1 Display 12	1 2 4
Smart Lap	1 2 1
Smart Lap 1 Display 12 Set Alert 14 Smart Pause 14	1 2 1 1 5
Smart Lap 1 Display 12 Set Alert 14 Smart Pause 14 Data Record 15	1 2 4 5 5
Smart Lap 1 Display 12 Set Alert 14 Smart Pause 14 Data Record 15 Personalize User Profile 16	1 2 4 5 5
Smart Lap	1 2 4 5 5 6
Smart Lap	1 2 4 5 6 9
Smart Lap	1 2 1 5 5 6 9 0 1
Smart Lap	1 2 4 5 5 5 9 0 1 1

Start Reminder	23
View Memroy Usage	23
Reset Data	24
Sensors	25
Appendix	26
Specifications	26
Battery Information	27
Install Rider 100	28
Install the Speed/Cadence/ Dual Sensor (Optional)	29
Install Heart Rate Belt (Optional)	30
Wheel Size and Circumference	31
Basic Care For Your Rider 100	32
Data Fields 33	



Always consult your physician before you begin or modify any training program. Please read the details in Warranty and Safety Information guide in the package.

Product Registration

Help us better support you by completing your device registration using Bryton Update Tool. Go to http://corp.brytonsport.com/products/support for more information.

Bryton Software

Go to http://brytonsport.com to upload tracks and analyze your data on the web.

Australian Consumer Law

Our goods come with guarantees that can not be excluded under the New Zealand and Australian Consumer Laws. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Getting Started

This section will guide you on the basic preparations before you start using your Rider 100.

Your Rider 100



1 BACK (■/|| BACK)

- · Press and hold to turn the device off.
- Press to return to the previous page or cancel an operation.
- When recording, press to pause recording. Press it again to stop recording.

2 LAP/OK (^{LAP} OK

- Press to turn the device on.
- In Menu, press to enter or confirm a selection.
- In free cycling, press to start recording.
- When recording, press to mark the lap.

3 PAGE (→ PAGE)

- In Menu, press to move down to scroll through menu options.
- In Meter view, press to switch meter screen page.

Accessories

The Rider 100 comes with the following accessories:

- USB cable
- Bike mount

Optional items:

- Heart rate belt • Speed sensor • Cadence sensor
- Speed/Cadence Dual sensor
 Out-front Bike Mount
 F-Mount

Status Icons

lcon	Description	
	Bike Type	
100	Bike 1	
2 000	Bike 2	
GPS Signal Status		
×/	No signal (not fixed)	
•	Weak signal	
?	Strong signal	
Power Status		
	Full battery	
	Half battery	
	Low battery	

lcon	Description
•	Heart Rate Sensor Active
9	Cadence Sensor Active
M	Speed Sensor Active
(_(\infty))	Dual Sensor Active
<u>(i)</u>	Notification
•	Log Record in Progress
П	Recording is paused
*	Bluetooth function is enabled
A / V	Current speed is faster/slower than average speed


NOTE: Only the active icons are displayed on the screen. Some icons may only apply to certain models.



Step 1: Charge your Rider 100

Connect Rider 100 to a PC to charge the battery for at least 3 hours. Unplug the device when it is fully charged.

- You may see a white screen when the battery is really low. Keep the device plugged for several minutes, it will automatically turn-on after battery is properly charged.
- The temperature suitable for charging battery is 0° C ~ 40° C. Beyond this temperature range, charging will be terminated and the device will draw power from battery.

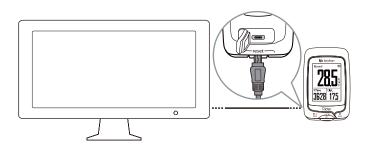

Step 2: Turn On Rider 100

Press $_{OK}^{LAP}$ to turn on the device.

Step 3: Initial Setup

When turning Rider 100 on for the first time, the setup wizard appears on screen. Follow the instructions to complete setup.

- 1. Select the display language.
- 2. Select the unit of measurement.


NOTE: Only when you choose English for the display language, you will need to select the unit of measurement. Otherwise, default would be metric unit.

Step 4: Acquire Satellite Signals

Once the Rider 100 is turned on, it will automatically search for satellite signals. It may take 30 to 60 seconds to acquire signals. Please make sure you acquire the satellite signal for the first time use.

The GPS signal icon $(\widehat{\gamma}/\widehat{\gamma})$ appears when GPS is fixed.

- If the GPS signal is not fixed, an ♠ icon appears on the screen.
- Please avoid the obstructed environments since they might affect the GPS reception.

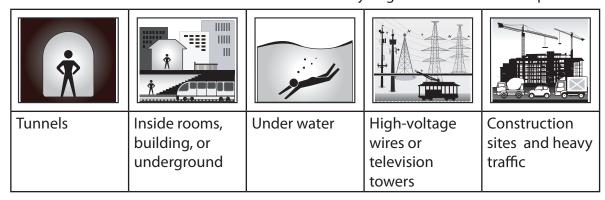

Step 5: Ride Your Bike with Rider 100

• Free ride:

In meter view, measurement starts and stops automatically in sync with the movement of the bicycle.

• Start an exercise and record your data:

In meter view, press $_{OK}^{LAP}$ to start recording, press $_{BACK}^{\blacksquare/\parallel}$ to pause, press $_{BACK}^{\blacksquare/\parallel}$ again to stop.

Reset Rider 100

To reset the Rider 100, long press all three keys ($_{BACK}^{\blacksquare/\parallel}$ / $_{OK}^{LAP}$) at the same time.



Download Bryton Update Tool

NOTE: Bryton Update Tool can notify you if a new software version or GPS data is available. The newer GPS data can speed up the GPS acquisition. We highly recommend you to check for updates every 1-2 weeks.

- 1. Go to http://www.brytonsport.com/help/start and download Bryton Update Tool.
- 2. Follow the on-screen instructions to install Bryton Update Tool.

Share Your Records

Share Your Tracks to Brytonsport.com

- 1. Sign up/log in on Brytonsport.com
 - a. Go to http://www.brytonsport.com/help/start.
 - b. Register a new account or use your current Bryton account to log in.

NOTE: Bryton account is the email address used to register as a member of brytonsport.com

2. Connect to PC

Turn on your Rider 100 and connect it to your computer by USB cable.

3. Share Your Records

- a. Go to http://www.brytonsport.com/help/landing. Click "Upload Files" button. Then, click "Select from Files".
- b. Choose to save as "History". Then, click "Select and Upload files".
- c. Select FIT files from Bryton device.

Share Your Tracks to Strava.com

- 1. Sign up/log in on Strava.com
 - a. Go to https://www.strava.com
 - b. Register a new account or use your current Strava account to log in.

2. Connect to PC

Turn on your Rider 100 and connect it to your computer by USB cable.


3. Share Your Records

- a. Click "+" on the top right corner of Strava page and then click "File".
- b. Click "Select Files" and select FIT files from Bryton device.
- c. Enter information about your activities and then click "Save & View".

View Exercise Record

Use View History to view or delete your exercise history.

View History

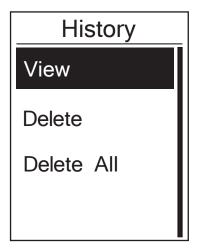


To view your history:

- 1. In the main menu, press PAGE to select **View History** > **View** and press $_{OK}^{LAP}$.
- 2. Press \mathbb{P}_{AGE} to select an exercise history from the list and press ok to view your history.
- 3. Press BACK to exit this menu.

NOTE: You can also upload your history to brytonsport.com to keep track of all your ride data.


Delete History

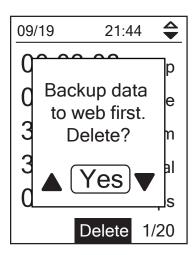

To delete your history:

- 1. In the main screen, press PAGE to select **View History** > **View** and press $_{OK}^{LAP}$.
- 2. Press \bigvee_{PAGE} to select **Delete** and press $_{OK}^{LAP}$ to enter the history list.
- 3. Press \mathbb{P}_{PAGE} to select an exercise history from the list and press $_{\text{OK}}^{\text{LAP}}$ to delete the selected history.
- 4. A "Backup data to web frist. Delete?" message appears on the screen. To delete the data, press BACK / PAGE to select **Yes** and press CK to confirm.


History Flow

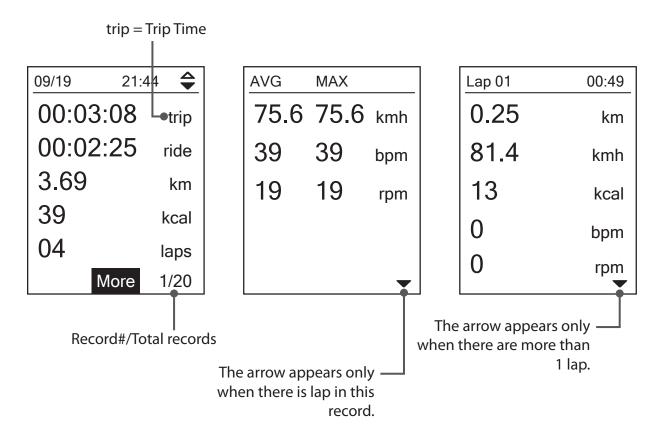



Settings

With the Settings feature, you can customize display settings, sensor settings, system settings, bike and user profiles, GPS setup, and view device information.

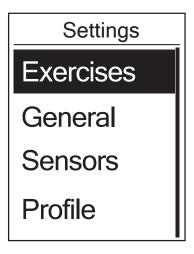


- 1. In the main screen, press $_{PAGE}^{\blacktriangledown}$ to select **Settings**.
- 2. Press $_{OK}^{LAP}$ to enter the Settings menu.

Smart Lap

With Smart Lap feature, you can use your device to automatically mark the lap at a specific location or after you have traveled a specific distance.

Lap by Location

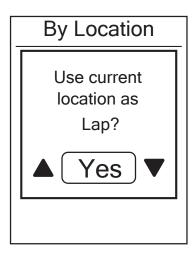


- In the Settings menu, press PAGE to select
 Exercises > Smart Lap and press OK OK
- 2. Press OK to edit the setting.
- 3. A "Use current location as Lap?"

 message appears on the screen. To save the data, press PAGE to select **Yes** and press OK to confirm.
- 4. Press $_{\text{BACK}}^{\blacksquare/\parallel}$ to exit this menu.

NOTE: If the GPS signal is not fixed, a "No GPS signal. Searching GPS, please wait" message appears on the screen. Check if the GPS is on and make sure you step outside to acquire the signal.

Lap by Distance

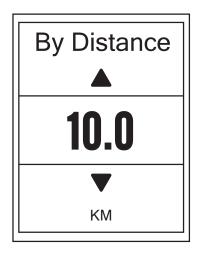


- 1. In the Settings menu, press $_{PAGE}^{\blacktriangledown}$ to select **Exercises> Smart Lap** and press $_{OK}^{LAP}^{\bigodot}$.
- 2. Press $_{OK}^{LAP} \bullet$ to edit the setting.
- 3. Press BACK / PAGE to select your desired distance and press OK to confirm.
- 4. Press BACK to exit this menu.


Data Page

You can set the data page setting for the Meter and Lap.

Meter Display

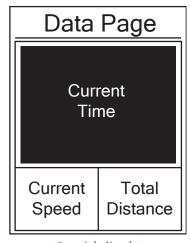

3-grid display

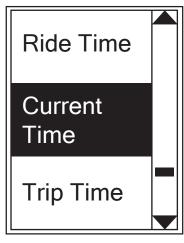

Item selection

- 1. In the Settings menu, press $_{PAGE}^{\blacktriangledown}$ to select **Exercises > Data Page** and press $_{OK}^{LAP}$ $_{OK}^{\blacktriangledown}$.
- 2. Press $_{OK}^{LAP}$ to enter **Data Page** setting and change the setting from **Auto** to **Manual**.
- 3. Press PAGE to select Data Page > Data Page1, Data Page 2, Data Page 3, Data Page 4 or Data Page 5 and press OK OK OK OK
- 4. Press $_{BACK}^{\blacksquare / \parallel} /_{PAGE}^{\blacksquare}$ to select the number of data fields and press $_{OK}^{LAP}$ to confirm.

- 5. Press \mathbb{P}_{PAGE} to select the item field that you want to customize, and press \mathbb{P}_{OK}^{LAP} to confirm the selection.
- 6. Press $_{BACK}^{\blacksquare / \parallel}/_{PAGE}^{\blacksquare}$ to select the desired setting and press $_{OK}^{LAP \bullet}$ to confirm.
- 7. Press $_{\text{BACK}}^{\blacksquare/\parallel}$ to exit this menu.

NOTE: The number of data fields shown on the screen depends on the "Data fields" selection.



2-grid display




3-grid display

NOTE: If Data Page is setted as Auto, Rider 100 will automatically adjust its data field display when detecting the paired sensors.





Lap Display

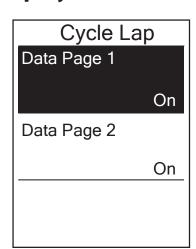


- 1. In the Settings menu, press PAGE to select Exercises > Data Page> Lap > Data Page1 or **Data Page 2** and press OK OK.
- 2. Press $_{BACK}^{\blacksquare/\parallel}/_{PAGE}^{\blacktriangledown}$ to select the number of data fields and press $_{OK}^{LAP}$ to confirm.
- 3. Press \mathbb{P}_{AGE} to select the item field that you want to customize, and press $_{\mathrm{OK}}^{\mathrm{LAP} ullet}$ to confirm the selection.
- 4. Press $_{\text{BACK}}^{\blacksquare/\parallel}/_{\text{PAGE}}^{\blacktriangledown}$ to select the desired setting and press $_{\text{OK}}^{\text{LAP}}$ to confirm.
- 5. Press BACK to exit this menu.



Set Alert

With the Alert feature, the device displays a message to notify you if:

- your heart rate exceeds or drops below a specific number of beats per minute (bpm).
- you exceed or drop below a custom speed setting during your ride.
- your cadence speed exceeds or drops below a specific number of revolutions of the crank arm per minute (rpm).
- you reach a certain amount of distance for the long workouts.
- you reach a certain amount of time for the long workouts.

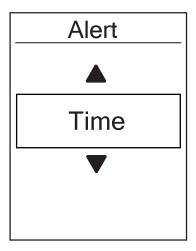


- 1. In the Settings menu, press PAGE to select

 Exercises > Alert and press OK to enter its submenu.
- 2. Select **Time**, **Distance**, **Speed**, **HR**, or **Cadence** and press or to configure the necessary settings.
- 3. Press $_{\rm BACK}^{\blacksquare/\parallel}$ / $_{\rm PAGE}^{\blacktriangledown}$ to select the desired setting and press $_{\rm ok}^{\rm LAP}{}^{\bullet}$ to confirm.

Smart Pause

When you have a lot of obstacles along your route such as traffic lights, crosswalk, etc., this can really impact your recorded data. When the function is activated, the time and distance will automatically pause once you stop moving and resume once you start riding to enhance your data efficiency.

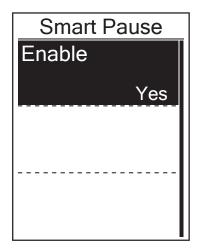

- 1. In the Settings menu, press _{PAGE} to select **Exercises** > **Smart Pause** and press ^{LAP} or enter its submenu.
- Select Yes to enable the function.

Data Record

With Data Record function, you can set your odometer to get your desired cumulative data.


Set ODO



- 1. In the Settings menu, press PAGE to select **Exercise> Data Record** and press ^{LAP} • ok
- 2. Press PAGE to select **ODO Setup** and press LAP ● to enter.
- 3. Press $_{OK}^{LAP}$ to enter its submenu and press $_{
 m BACK}^{lacksquare / II}$ / $_{
 m PAGE}^{lacksquare}$ to select the desired setting, then press ^{LAP} to confirm.

NOTE: All means the odometer would show the cumulative distance of all trips; **Recorded** would only show the cumulative distance of recorded trips.

Enable 1sec Mode

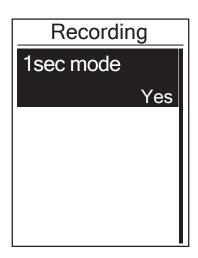


- 1. In the Settings menu, press ▼ to select **Exercise** > **Data Record** and press $_{OK}^{LAP}$.
- 2. Press PAGE to select **Recording** and press ok to enter.
- 3. Press $_{OK}^{LAP}$ to enter its submenu and press \blacksquare / \blacksquare / \blacksquare to select **Yes**, and press $^{\text{LAP}}$ OK to confirm.



Personalize User Profile


You can change your personal information.

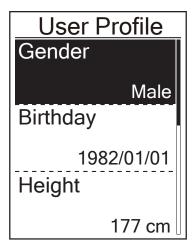

- 1. In the Settings menu, press $_{PAGE}^{\blacktriangledown}$ to select **Profile** and press $_{OK}^{LAP}$.
- 2. Press PAGE to select the setting that you want to change and press OK to enter its submenu. ▼
 - · Gender: select your gender.
 - Birthday: set your Birthday.
 - · Height: set your height.
 - · Weight: set your weight.
 - Max HR: set your maximum heart rate.
 - LTHR: set your lactate threshold heart rate.
- 3. Press $_{\text{BACK}}^{\blacksquare/\parallel}$ / $_{\text{PAGE}}^{\blacktriangledown}$ to adjust the desired setting and press $_{\text{OK}}^{\text{LAP}}$ to confirm.
- 4. Press $_{BACK}^{\blacksquare/\parallel}$ to exit this menu.

Personalize Bike Profile

You can customize and view your bicycle(s) profile.

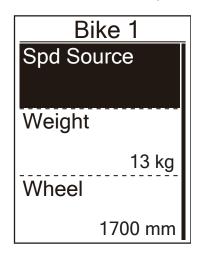

- In the Settings menu, press PAGE to select
 Profile>Bike Profile> Bike 1 or Bike 2 and press OK
- 2. Press \bigvee_{PAGE} to select the setting that you want to change and press \bigcap_{OK}^{LAP} to enter its submenu.
 - Spd Source: set the priority of the speed sources
 - · Weight: set the bike weight.
 - Wheel: set the bike wheel size.
 - Activate: select to activate the bike.
- 3. Press $_{\text{BACK}}^{\blacksquare / \parallel} /_{\text{PAGE}}^{\blacksquare}$ to adjust the desired setting and press $_{\text{ok}}^{\text{LAP}}$ to confirm.
- 4. Press $_{\text{BACK}}^{\blacksquare/\parallel}$ to exit this menu.

NOTE: For details on wheel size, see "Wheel Size and Circumference" on page 31.

View Bike Profile



- 1. In the Settings menu, press PAGE to select **Profile>Bike Profile > Overview** and press $_{OK}^{LAP}$.
- 2. Press \bigvee_{PAGE} to select the desired bike and press $_{ok}^{LAP}$ to confirm.
- 3. Press $_{PAGE}^{\blacktriangledown}$ to view more data of the selected bike.
- 4. Press $_{\text{BACK}}^{\blacksquare/\parallel}$ to exit this menu.



Change System Settings


You can customize the device system settings such as backlight off, self lap, key tone, sound, time/unit, on-screen display language.

Backlight Off




- In the Settings menu, press PAGE to select
 General > System > Backlight Off and press OK OK OK
- 2. Press BACK / PAGE to select the desired setting and press CAP to confirm.
- 3. Press $_{BACK}^{\blacksquare/\parallel}$ to exit this menu.

Key Tone

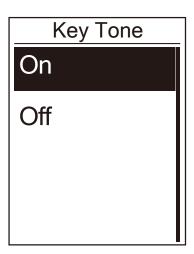

- In the Settings menu, press PAGE to select
 General > System> Key Tone and press OK OK OK
- 2. Press $_{\text{BACK}}^{\blacksquare / \parallel} /_{\text{PAGE}}^{\blacktriangledown}$ to select the desired setting and press $_{\text{OK}}^{\text{LAP} \bullet}$ to confirm.
- 3. Press BACK to exit this menu.

Sound

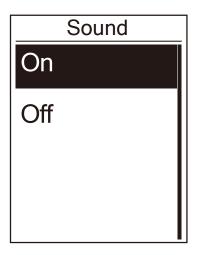


- 1. In the Settings menu, press ▼ to select **General** > **System** > **Sound** and press $_{OK}^{LAP}$.
- 2. Press $_{\rm BACK}^{\blacksquare/\parallel}/_{\rm PAGE}^{\blacksquare}$ to select the desired setting and press $_{\text{ok}}^{\text{LAP}}$ to confirm.
- 3. Press $_{\text{BACK}}^{\blacksquare/\parallel}$ to exit this menu.


Time/Unit



Daylight Save

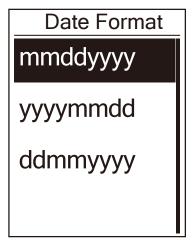

Date format

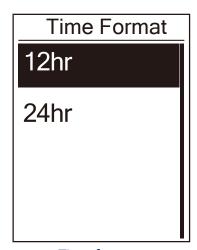

Time format



Unit

- 1. In the Settings menu, press

 Note: The select of the General > System > Time/Unit > Daylight Save, Date format, Time format, or Unit and press $_{ok}^{LAP}$.
- 2. Press $_{BACK}^{\blacksquare/\parallel}/_{PAGE}^{\blacktriangledown}$ to select the desired setting/format and press $_{\text{ok}}^{\text{LAP}} \bullet$ to confirm.
- 3. Press BACK to exit this menu.




Language



- In the Settings menu, press PAGE to select
 General > System > Language and press OK OK OK
- 2. Press $_{\text{BACK}}^{\blacksquare/\parallel}/_{\text{PAGE}}^{\blacksquare}$ to select the desired setting and press $_{\text{OK}}^{\text{LAP}}$ to confirm.
- 3. Press $_{\text{BACK}}^{\blacksquare/\parallel}$ to exit this menu.

View GPS Status

You can view the GPS signal information that your device is currently receiving.

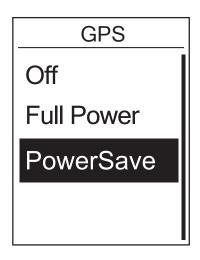

- In the Settings menu, press PAGE to select
 General > GPS and press OK OK OK
- To set the signal search mode, press ok to confirm.
- 3. Press $_{BACK}^{\blacksquare/\parallel}/_{PAGE}^{\blacktriangledown}$ to select the desired setting and press $_{OK}^{LAP}$ to confirm.
 - Off: Turn-off GPS functions. Choose this to save power when GPS signal is not available, or when GPS information is not required (such as indoor use).
 - Full Power: maximum position and speed accuracy, consumes more power.
 - PowerSaving: Achieves longer battery life when used in good GPS signal condition, but less accurate.

View Software Version


You can view your device current software version.

- 1. In the Settings menu, press $_{PAGE}^{\blacktriangledown}$ to select **General > About**.
- 2. Press OK to confirm. The current software version is displayed on the screen.
- 3. Press $_{BACK}^{\blacksquare/\parallel}$ to exit this menu.

Bluetooth

Before pairing Rider 100 with your bluetooth enabled mobile phone, make sure the bluetooth function of your mobile phone and Rider 100 is turned on.

Enable Bluetooth

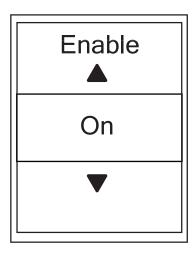


- 1. In the Settings menu, press

 →

 PAGE to select **General** > **Bluetooth** and press $_{OK}^{LAP} \bullet$.
- 2. Press $^{\blacksquare / \parallel}_{\text{BACK}} / ^{\blacktriangledown}_{\text{PAGE}}$ to select **On** and press $^{\text{LAP}}_{\text{OK}}$ to confirm.
- 3. Press $_{\text{BACK}}^{\blacksquare/\parallel}$ to exit this menu.

Configure Auto Scroll


When the feature is enabled, the data will automatically switch pages at the preset time.

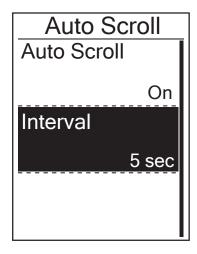

- 1. In the Settings menu, press $_{PAGE}^{\blacktriangledown}$ to select **General > Auto Scroll** and press $_{OK}^{LAP}$.
- 2. Press PAGE to select the setting that you want to change and press OK to enter its submenu. ▼
 - Auto scroll: enable/disable the auto switch.
 - Interval: set the interval time.
- 3. Press $_{\text{BACK}}^{\blacksquare/\parallel}/_{\text{PAGE}}^{\blacksquare}$ to adjust the desired setting and press $_{\text{OK}}^{\text{LAP}}$ to confirm.
- 4. Press BACK to exit this menu.

Enable File Saving Mode


When the feature is enabled, the device will automatically overwrite from your oldest records when memory storage is full.

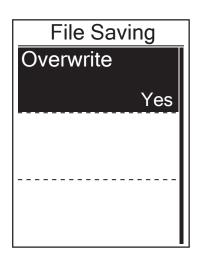

- 1. In the Settings menu, press $_{PAGE}^{\blacktriangledown}$ to select **General > File Saving** and press $_{OK}^{LAP}$.
- 2. Press OK to enter its submenu and press NACK PAGE to adjust the desired setting and press LAP OK to confirm.
- 3. Press $_{BACK}^{\blacksquare/\parallel}$ to exit this menu.

Start Reminder


When Rider 100 detects the motion of your bike, it would pop up a reminder to ask you if you would like to record or not. You can set the frequency of start reminder.

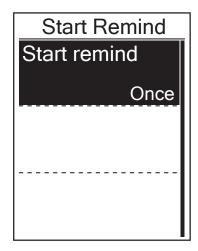

- 1. In the Settings menu, press ₱AGE to select General > Start Remind and press OK . .
- 2. $\operatorname{Press}^{\operatorname{LAP}}_{\operatorname{OK}}$ to enter its submenu and press $\blacksquare_{\mathsf{BACK}}^{\prime \parallel} / \blacksquare_{\mathsf{PAGE}}^{}$ to adjust the desired setting and press $_{OK}^{LAP}$ to confirm.
- 3. Press $_{BACK}^{\blacksquare/\parallel}$ to exit this menu.

View Memory Usage

View the storage status of the device.

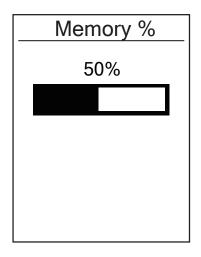


- 1. In the Settings menu, press

 →

 PAGE to select General > Memory % and press o_K. The storage status is displayed on the screen.
- 2. Press $_{BACK}^{\blacksquare / \parallel}$ to exit this menu.

Reset Data


You can resotre your Rider 100 to factory setting.

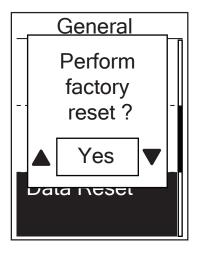



- In the Settings menu, press PAGE to select
 General > Data Reset and press OK OK OK
- 2. Press $_{\text{BACK}}^{\blacksquare/\parallel}/_{\text{PAGE}}^{\blacktriangledown}$ to adjust the desired setting and press $_{\text{OK}}^{\text{LAP}}$ to confirm.

Sensors

You can customize the respective sensor settings such as enable/disable the function or rescan the sensor for the device.

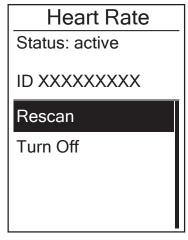

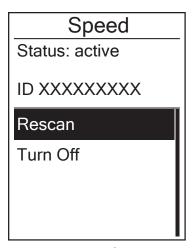


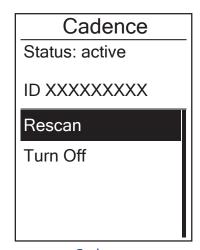

Heart Rate

Speed

Cadence

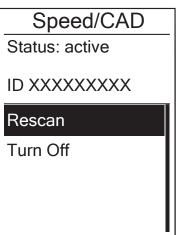

Speed/Cadence

- 1. In the Settings menu, press \mathbb{P}_{PAGE} to select **Sensors** > **Heart Rate**, **Speed**, **Cadence**, or **Speed/CAD** and press OK OK.
- 2. Press $_{OK}^{LAP}$ to have more options. Press $_{PAGE}^{\P}$ to select the desired setting and press $_{OK}^{LAP}$ to confirm.
 - Rescan: rescan to detect the sensor.
 - Turn on/Turn off: enable/disable the sensor.
- 3. Press $_{BACK}^{\blacksquare/\parallel}$ to exit this menu.

NOTE:

- When the heart rate monitor is paired, the Pheart rate icon appears on the main screen.
- While pairing your speed/cadence sensor and the heart rate belt, please make sure there is no other cadence/speed sensor within 5 m. When the cadence sensor is paired, the **6** cadence sensor icon appears on the main screen.



Appendix

Specifications

Rider 100

Item	Description
Display	1.6" FSTN positive transflective LCD
Physical Size	39.8 x 60.5 x 16.5 mm
Weight	40g
Operating Temperature	-10°C ~ 50°C
Battery Charging Temperature	0°C ~ 40°C
Battery	Li polymer rechargeable battery
Battery Life	25 hours with open sky
ANT+™	Featuring certified wireless ANT+™ connectivity. Visit www.thisisant.com/directory for compatible products.
GPS	Integrated high-sensitivity GPS receiver with embedded antenna
BLE Smart	Bluetooth smart wireless technology with embedded antenna
Water Resistant	IPX7 waterproof rating

Cadence Sensor

ltem	Description
Physical size	33.9 x 13.5 x 39 mm
Weight	14 g
Water Resistance	IPX7
Transmission range	5 m
Battery life	1 hour per day for 16 months
Operating temperature	-10°C ~ 60°C
Radio frequency/protocol	2.4GHz / Dynastream ANT+ Sport wireless communications protocol

Accuracy may be degraded by poor sensor contact, electrical interference, and receiver distance from the transmitter.

Heart Rate Monitor

ltem	Description
Physical size	67~100 x 26 x 15 mm
Weight	14 g (sensor) / 35g (strap)
Water Resistance	20 m
Transmission range	5 m
Battery life	1 hour per day for 24 months
Operating temperature	5°C ~ 40°C
Radio frequency/protocol	2.4GHz / Dynastream ANT+ Sport wireless communications protocol


Accuracy may be degraded by poor sensor contact, electrical interference, and receiver distance from the transmitter.

Battery Information

Heart Rate Monitor and Cadence Sensor Battery

The heart rate monitor/cadence sensor contains a user-replaceable CR2032 battery. To replace the battery:

- 1. Locate the circular battery cover on the back of the heart rate monitor/cadence sensor.
- 2. Use a coin to twist the cover counter-clockwise so the arrow on the cover points to OPEN.
- 3. Remove the cover and battery. Wait for 30 seconds.
- 4. Insert the new battery, with the positive connector first into the battery chamber.
- 5. Use a coin to twist the cover clockwise so the arrow on the cover points to CLOSE.

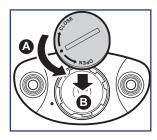






NOTE:

- When installing a new battery, if the battery is not placed with the positive connector first, the positive connector will easily deform and malfunction.
- Be careful not to damage or lose the O-ring gasket on the cover.
- Contact your local waste disposal department to properly dispose of used batteries.




Install Rider 100


Use Bike Mount to Mount Rider

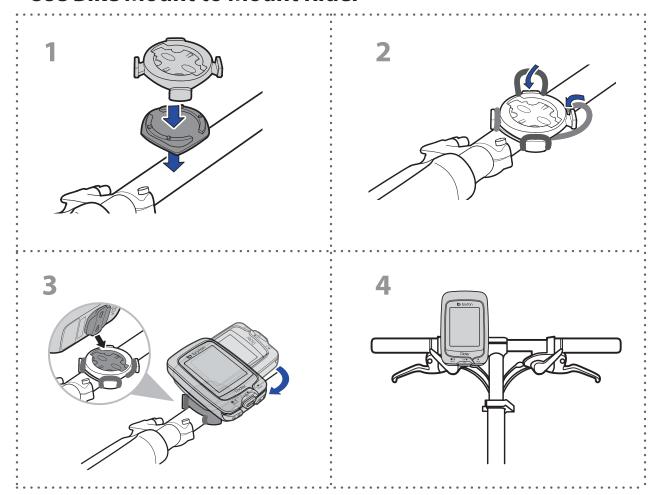

Use F-Mount to Mount Rider (Optional)

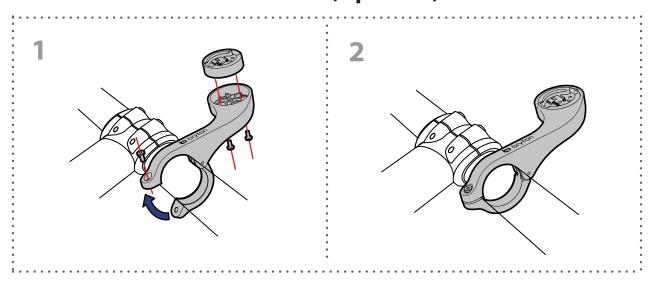

Install the Speed/Cadence/Dual Sensor (Optional)

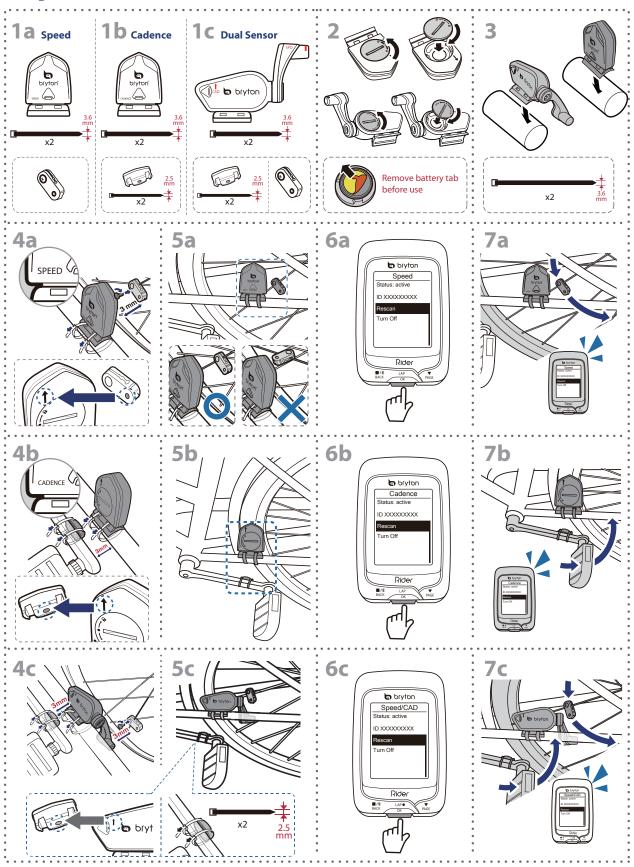





NOTE:

- To ensure optimum performance, do the following:
 - Align both sensor and magnet as shown in the illustration (5a / 5b). Pay attention on the alignment points.
- Ensure the distance between the sensor and the magnet is within 3 mm.
- Ensure that both Speed sensor and Speed magnet are installed and aligned horizontally, not vertically.
- On the initial usage, press the front button to activate the sensor and start pedaling. When the sensor detects the magnet, the LED blinks once to indicate the alignment is correct (the LED blinks only for the first ten passes after pressing the button).

Install Heart Rate Belt (Optional)

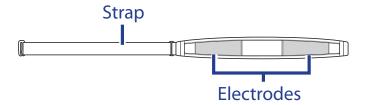

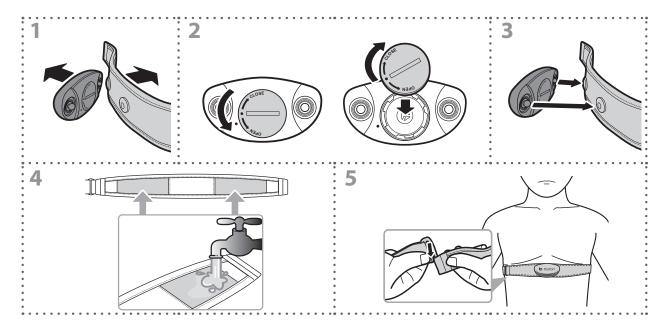

NOTE:

- In cold weather, wear appropriate clothing to keep the heart rate belt warm.
- The belt should be worn directly on your body.
- Adjust the sensor position to the middle part of the body (wear it slightly below the chest). The Bryton logo shown on the sensor should be facing upward. Tighten the elastic belt firmly so that it will not turn loose during the exercise.
- If the sensor cannot be detected or the reading is abnormal, please warm up for about 5
- If the heart rate belt is not used for a period of time, remove the sensor from the heart rate belt.

Wheel Size and Circumference

The wheel size is marked on both sides of the tires.

Villet Size L(min) 12x1.75 935 12x1.95 940 14x1.75 1055 16x1.50 1185 16x1.75 1195 16x2.00 1245 16x1-1/8 1290 16x1-3/8 1300 17x1-1/4 1340 18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x2.00 1925 24x2.125 1965 24x1.75 1890 24x2.10 1753 24x1-1/8 1795 24x1-1/8 1795 24x1-1/4 1905 26x1.59 1913 26x1.50 2010 26x1.75 202	Wheel Size	(mama)
12x1.95 940 14x1.50 1020 14x1.75 1055 16x1.50 1185 16x1.75 1195 16x2.00 1245 16x1-1/8 1290 16x1-3/8 1300 17x1-1/4 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-3/8 1770 22x1-1/2 1785 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	Wheel Size	L(mm)
14x1.50 1020 14x1.75 1055 16x1.50 1185 16x1.75 1195 16x2.00 1245 16x1-1/8 1290 16x1-3/8 1300 17x1-1/4 1340 18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.125 1965 24x1(520) 1753 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070		
14x1.75 1055 16x1.50 1185 16x1.75 1195 16x2.00 1245 16x1-1/8 1290 16x1-3/8 1300 17x1-1/4 1340 18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x2.10 2068 26x2.125 2070		
16x1.50 1185 16x1.75 1195 16x2.00 1245 16x1-1/8 1290 16x1-3/8 1300 17x1-1/4 1340 18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070		
16x1.75 1195 16x2.00 1245 16x1-1/8 1290 16x1-3/8 1300 17x1-1/4 1340 18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x2.00 1925 24x2.125 1965 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1.25 1950 26x1.40 2005 26x1.75 2023 26x2.10 2068 26x2.125 2070		
16x2.00 1245 16x1-1/8 1290 16x1-3/8 1300 17x1-1/4 1340 18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.75 2023 26x2.10 2068 26x2.125 2070		
16x1-1/8 1290 16x1-3/8 1300 17x1-1/4 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1.25 1950 26x1.40 2005 26x1.75 2023 26x2.10 2068 26x2.125 2070		
16x1-3/8 1300 17x1-1/4 1340 18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x2.10 2068 26x2.125 2070		
17x1-1/4 1340 18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x2.10 2068 26x2.125 2070		
18x1.50 1340 18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1.25 1950 26x1.40 2005 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070		
18x1.75 1350 20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x2.00 1925 24x2.125 1965 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070		1340
20x1.25 1450 20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	18x1.50	1340
20x1.35 1460 20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	18x1.75	1350
20x1.50 1490 20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	20x1.25	1450
20x1.75 1515 20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	20x1.35	1460
20x1.95 1565 20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	20x1.50	1490
20x1-1/8 1545 20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.95 2023 26x2.10 2068 26x2.125 2070	20x1.75	1515
20x1-3/8 1615 22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.95 2050 26x2.10 2068 26x2.125 2070	20x1.95	1565
22x1-3/8 1770 22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	20x1-1/8	1545
22x1-1/2 1785 24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.95 2050 26x2.10 2068 26x2.125 2070	20x1-3/8	1615
24x1.75 1890 24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	22x1-3/8	1770
24x2.00 1925 24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	22x1-1/2	1785
24x2.125 1965 24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x2.10 2068 26x2.125 2070	24x1.75	1890
24x1(520) 1753 24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	24x2.00	1925
24x3/4 Tubular 1785 24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	24x2.125	1965
24x1-1/8 1795 24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	24x1(520)	1753
24x1-1/4 1905 26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	24x3/4 Tubular	1785
26x1(559) 1913 26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	24x1-1/8	1795
26x1.25 1950 26x1.40 2005 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	24x1-1/4	1905
26x1.40 2005 26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	26x1(559)	1913
26x1.50 2010 26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	26x1.25	1950
26x1.75 2023 26x1.95 2050 26x2.10 2068 26x2.125 2070	26x1.40	2005
26x1.95 2050 26x2.10 2068 26x2.125 2070	26x1.50	2010
26x2.10 2068 26x2.125 2070	26x1.75	2023
26x2.125 2070	26x1.95	2050
	26x2.10	2068
26x2.35 2083	26x2.125	2070
	26x2.35	2083

ne tires.	
Wheel Size	L(mm)
26x3.00	2170
26x1-1/8	1970
26x1-3/8	2068
26x1-1/2	2100
650C Tubular 26x7/8	1920
650x20C	1938
650x23C	1944
650x25C 26x1(571)	1952
650x38A	2125
650x38B	2105
27x1(630)	2145
27x1-1/8	2155
27x1-1/4	2161
27x1-3/8	2169
27.5x1.50	2079
27.5x2.1	2148
27.5x2.25	2182
700x18C	2070
700x19C	2080
700x20C	2086
700x23C	2096
700x25C	2105
700x28C	2136
700x30C	2146
700x32C	2155
700C Tubular	2130
700x35C	2168
700x38C	2180
700x40C	2200
700x42C	2224
700x44C	2235
700x45C	2242
700x47C	2268
29x2.1	2288
29x2.2	2298
29x2.3	2326



Basic Care For Your Rider 100

Taking good care of your device will reduce the risk of damage to your device.

- Do not drop your device or subject it to severe shock.
- Do not expose your device to extreme temperatures and excessive moisture.
- The screen surface can easily be scratched. Use the non-adhesive generic screen protectors to help protect the screen from minor scratches.
- Use diluted neutral detergent on a soft cloth to clean your device.
- Do not attempt to disassemble, repair, or make any modifications to your device. Any attempt to do so will make the warranty invalid.

NOTE: Improper battery replacement may cause an explosion. When replacing a new battery, use only the original battery or a similar type of battery specified by the manufacturer. Disposal of the used batteries must be carried out in accordance to the regulations of your local authority.



For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

Data Fields

Data Field	Complete Data Field Name
Sunrise	Sunrise Time
Sunset	Sunset Time
RTime	Ride Time
AvgSpd	Average Speed
Max Spd	Maximum Speed
HR	Heart Rate
Avg HR	Average Heart Rate
Max HR	Maximum Heart Rate
MHR Zone	Maximum Heart Rate Zone
LTHR Zone	Lactate Threshold Heart Rate Zone
MHR%	Maximum Heart Rate Percentage
LTHR%	Lactate Threshold Heart Rate Percentage
AvgCAD	Average Cadence
MaxCAD	Maximum Cadence
LapAvSpd	Lap Average Speed
LapMaSpd	Lap Maximum Speed
L'stLpAvSp	Last Lap Average Speed
LapDist	Lap Distance
L'stLpDist	Last Lap Distance
L'stLapT	Last Lap Time
LapAvHR	Lap Average Heart Rate
LapMaHR	Lap Maximum Heart Rate
L'LpAvHR	Last Lap Average Heart Rate
L'A'MHR%	Lap Average MHR Percentage
L'A'LTHR%	Lap Average LTHR Percentage
LpAvSt'dR	Lap Average Stride Rate
LpStr'dAvL	Lap Stride Average Length
LLpSt'dAvL	Last Lap Stride Average Length
LapAvP	Lap Average Pace
L'stLpAvP	Last Lap Average Pace

Data Fields	Complete Data Field Name
LapMaP	Lap Maximum Pace
LAvCAD	Lap Average Cadence
LLAvCad	Last Lap Average Cadence
ODO	Odometer
Temp.	Temperature
Dist.	Distance
T to Dest	Time to Destination
D to Dest	Distance to Destination
Max Alt.	Maximum Altitude
Alt. Gain	Altitude Gain
Alt. Loss	Altitude Loss
Str'dRate	Stride Rate
AvStr'dRt	Average Stride Rate
MaStr'dRt	Maximum Stride Rate
AvSt'dl'gth	Average Stride Length
AvgPace	Average Pace
MaxPace	Maximum Pace
L'st1kmP	Last 1 km/mile Pace
PW now	Current Power
Avg PW	Average Power
Max PW	Maximum Power
LapMaxPW	Lap Maximum Power
LLapMaxPW	Last Lap Maximum Power
LapAvgPW	Lap Average Power
LLapAvgPW	Last Lap Average Power
3s PW	3 Seconds Average Power
30s PW	30 Seconds Average Power
MAP Zone	Maximum Aerobic Power Zone
MAP%	Maximum Aerobic Power Percentage
FTP Zone	Functional Threshold Power Zone
FTP%	Functional Threshold Power Percentage

Data Fields	Complete Data Field Name
CPB-LR	Current Left and Right Power Balance
MPB-LR	Maximum Left and Right Power Balance
APB L-R	Average Left and Right Power Balance
CTE-LR	Current Left and Right Torque Effectiveness
MTE-LR	Maximum Left and Right Torque Effectiveness
ATE-LR	Average Left and Right Torque Effectiveness
CPS L-R	Current Left and Right Pedal Smoothness
APS L-R	Average Left and Right Pedal Smoothness
MPS-LR	Maximum Left and Right Pedal Smoothness
IF	Intensity Factor
NP	Normalized Power
SP	Specific Power
TSS	Training Stress Score

NOTE: Some data fields may only apply to certain models.

